

При обращении используйте промокод AND-PDF и получите скидку.

# Inspiron 15 3000

## Setup and Specifications

**Computer Model:** Inspiron 15-3573  
**Regulatory Model:** P63F  
**Regulatory Type:** P63F004



При обращении используйте промокод AND-PDF и получите скидку.

# Notes, cautions, and warnings

---



**NOTE:** A NOTE indicates important information that helps you make better use of your product.



**CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



**WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

---

© 2018 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2017 - 12

Rev. A00

При обращении используйте промокод AND-PDF и получите скидку.

# Contents

<b>Set up your computer.....</b>	<b>5</b>
<b>Create a USB recovery drive for Windows.....</b>	<b>7</b>
Reinstall Windows using a USB recovery drive.....	7
<b>Views.....</b>	<b>9</b>
Front.....	9
Left.....	9
Right.....	10
Base.....	11
Display.....	12
Back.....	13
<b>Specifications.....</b>	<b>14</b>
System information.....	14
Computer model.....	14
Dimensions and weight.....	14
Operating system.....	14
Memory.....	15
Ports and connectors.....	15
Communications.....	16
Wireless module.....	16
Audio.....	16
Storage.....	17
Media-card reader.....	17
Keyboard.....	17
Camera.....	18
Touchpad.....	18

При обращении используйте промокод AND-PDF и получите скидку.

Touchpad gestures.....	18
Power adapter.....	19
Battery.....	19
Display.....	20
Video.....	20
Computer environment.....	20
<b>Keyboard shortcuts.....</b>	<b>22</b>
<b>Getting help and contacting Dell.....</b>	<b>24</b>
Self-help resources.....	24
Contacting Dell.....	25

При обращении используйте промокод AND-PDF и получите скидку.

# Set up your computer

---

- 1 Connect the power adapter and press the power button.



- 2 Finish operating system setup.

## **For Ubuntu:**

Follow the instructions on the screen to finish setup.

## **For Windows:**

Follow the on-screen instructions to complete the setup. When setting up, Dell recommends that you:

- Connect to a network for Windows updates.

 **NOTE: If connecting to a secured wireless network, enter the password for the wireless network access when prompted.**

- If connected to the internet, sign-in with or create a Microsoft account. If not connected to the internet, create an offline account.
- On the **Support and Protection** screen, enter your contact details.

При обращении используйте промокод AND-PDF и получите скидку.

### 3 Locate and use Dell apps from the Windows Start menu—Recommended

**Table 1. Locate Dell apps**



#### **Dell Product Registration**

Register your computer with Dell.



#### **Dell Help & Support**

Access help and support for your computer.



#### **SupportAssist**

Proactively checks the health of your computer's hardware and software.



**NOTE: Renew or upgrade your warranty by clicking the warranty expiry date in SupportAssist.**



#### **Dell Update**

Updates your computer with critical fixes and important device drivers as they become available.



#### **Dell Digital Delivery**

Download software applications including software that is purchased but not pre-installed on your computer.

### 4 Create recovery drive for Windows.



**NOTE: It is recommended to create a recovery drive to troubleshoot and fix problems that may occur with Windows.**

For more information, see [Create a USB recovery drive for Windows](#).

При обращении используйте промокод AND-PDF и получите скидку.

# Create a USB recovery drive for Windows

---

Create a recovery drive to troubleshoot and fix problems that may occur with Windows. An empty USB flash drive with a minimum capacity of 16 GB is required to create the recovery drive.


 **NOTE: This process may take up to an hour to complete.**

 **NOTE: The following steps may vary depending on the version of Windows installed. Refer to the [Microsoft support site](#) for latest instructions.**

- 1 Connect the USB flash drive to your computer.
- 2 In Windows search, type *Recovery*.
- 3 In the search results, click **Create a recovery drive**.  
The **User Account Control** window is displayed.
- 4 Click **Yes** to continue.  
The **Recovery Drive** window is displayed.
- 5 Select **Back up system files to the recovery drive** and click **Next**.
- 6 Select the **USB flash drive** and click **Next**.  
A message appears, indicating that all data in the USB flash drive will be deleted.
- 7 Click **Create**.
- 8 Click **Finish**.

For more information about reinstalling Windows using the USB recovery drive, see the *Troubleshooting* section of your product's *Service Manual* at [www.dell.com/support/manuals](http://www.dell.com/support/manuals).

## Reinstall Windows using a USB recovery drive

 **CAUTION: This process formats the hard drive and removes all data on your computer. Ensure that you back up data on your computer before beginning this task.**

При обращении используйте промокод AND-PDF и получите скидку.



**NOTE: Before reinstalling Windows, ensure your computer has more than 2 GB of memory and more than 32 GB of storage space.**



**NOTE: This process may take up to an hour to complete and your computer will restart during the recovery process.**

- 1 Connect the USB recovery drive to your computer.
- 2 Restart your computer.
- 3 Press F12 after the Dell logo is displayed on the screen to access the boot menu. A **Preparing one-time boot menu** message appears.
- 4 After the boot menu loads, select the USB recovery device under **UEFI BOOT**. The system reboots and a screen to **Choose the keyboard layout** is displayed.
- 5 Choose your keyboard layout.
- 6 In the **Choose an option** screen, click **Troubleshoot**.
- 7 Click **Recover from a drive**.
- 8 Choose one of the following options:
  - **Just remove my files** to do a quick format.
  - **Fully clean the drive** to do a complete format.
- 9 Click **Recover** to start the recovery process.




При обращении используйте промокод AND-PDF и получите скидку.

# Views


---

## Front

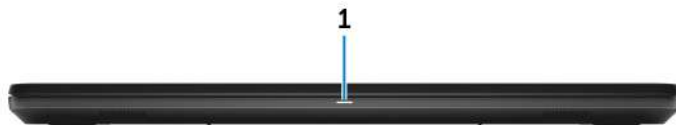

### 1 Power and battery-status light/hard-drive activity light

Indicates the battery-charge status or the hard-drive activity.

 **NOTE: Press Fn+H to toggle between the power and battery-status light, and hard-drive activity light.**

#### Hard-drive activity light

Turns on when the computer reads from or writes to the hard drive.

#### Power and battery-status light

Indicates the power and battery-charge status.

**Solid white** — Power adapter is connected and the battery has more than 10% charge.

**Amber** — Computer is running on battery and the battery has less than 10% charge.

#### Off

- Power adapter is connected and the battery is fully charged.
- Computer is running on battery and the battery has more than 10% charge.
- Computer is in sleep state, hibernation, or turned off.

## Left



При обращении используйте промокод AND-PDF и получите скидку.

**1 Power-adapter port**

Connect a power adapter to provide power to your computer and charge the battery.


**2 HDMI port**

Connect a TV or another HDMI-in enabled device. Provides video and audio output.

**3 USB 3.1 Gen 1 ports (2)**

Connect peripherals such as external storage devices and printers. Provides data transfer speeds up to 5 Gbps.

## Right

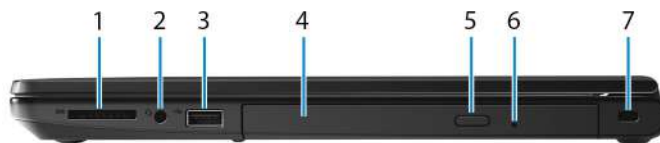

**1 SD-card slot**

Reads from and writes to the SD card.

**2 Headset port**

Connect headphones or a headset (headphone and microphone combo).

**3 USB 2.0 port**

Connect peripherals such as external storage devices and printers. Provides data transfer speeds up to 480 Mbps.

**4 Optical drive (optional)**

Reads from and writes to CDs and DVDs.

**5 Optical-drive eject button**

Press to open the optical drive tray.

**6 Optical-drive emergency eject pinhole**

Used to eject the optical-drive tray manually if the optical-drive eject button fails.



**NOTE: For more information about manually ejecting optical-drive trays, see the knowledge base article [SLN301118](#) at [www.dell.com/support](http://www.dell.com/support).**

При обращении используйте промокод AND-PDF и получите скидку.

## 7 Security-cable slot (for Kensington locks)

Connect a security cable to prevent unauthorized movement of your computer.

# Base



### 1 Left-click area

Press to left-click.

### 2 Touchpad

Move your finger on the touchpad to move the mouse pointer. Tap to left-click and two finger tap to right-click.

### 3 Right-click area

Press to right-click.


### 4 Power button

Press to turn on the computer if it is turned off, in sleep state, or in hibernate state.

Press to put the computer in sleep state if it is turned on.

Press and hold for 4 seconds to force shut-down the computer.

При обращении используйте промокод AND-PDF и получите скидку.

 **NOTE: You can customize the power-button behavior in Power Options. For more information, see *Me and My Dell* at [www.dell.com/support/manuals](http://www.dell.com/support/manuals).**


## Display



- 1 Camera**  
Enables you to video chat, capture photos, and record videos.
- 2 Camera-status light**  
Turns on when the camera is in use.
- 3 Microphone**  
Provides digital sound input for audio recording, voice calls, and so on.

При обращении используйте промокод AND-PDF и получите скидку.

## Back

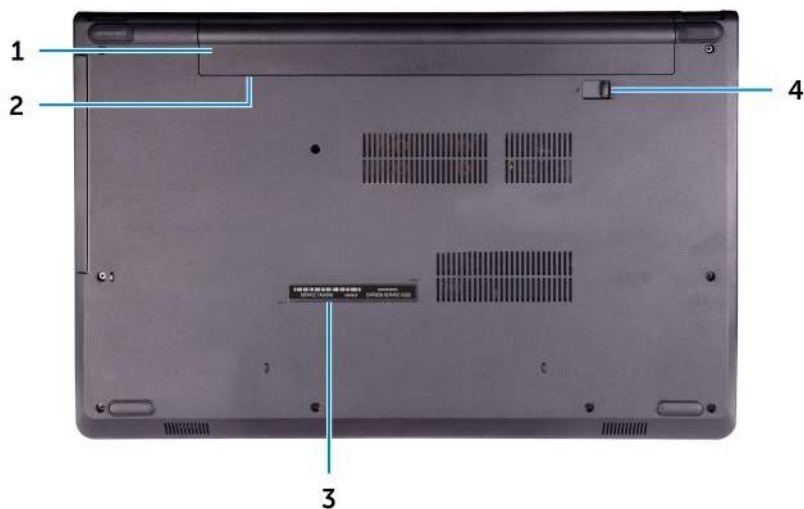

### 1 **Battery**

Supplies power to the computer. It enables the computer to work without connecting to an electrical outlet for a limited time.

### 2 **Regulatory label (in battery bay)**

Contains regulatory information of your computer.

### 3 **Service Tag label**

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.

### 4 **Battery-release latch**

Lock/unlock the battery in the battery bay. Slide the latch to the unlock position, to release the battery.

При обращении используйте промокод AND-PDF и получите скидку.

# Specifications

---

## System information

**Table 2. System information**

Processor	<ul style="list-style-type: none"><li>• Intel Pentium Silver N5000</li><li>• Intel Celeron N4000</li></ul>
Chipset	Integrated in the processor

## Computer model

**Table 3. Computer model**

Computer model	Inspiron 15-3573
----------------	------------------

## Dimensions and weight

**Table 4. Dimensions and weight**

Height	23.65 mm (0.93 in)
Width	380 mm (14.96 in)
Depth	260.30 mm (10.25 in)
Weight (approximate)	2.30 kg (5.07 lb)



**NOTE: The weight of your computer varies depending on the configuration ordered and the manufacturing variability.**

## Operating system

**Table 5. Operating system**

Operating systems supported	<ul style="list-style-type: none"><li>• Ubuntu</li></ul>
-----------------------------	--

При обращении используйте промокод AND-PDF и получите скидку.

- Windows 10 Home 64-bit
- Windows 10 Professional 64-bit

## Memory

**Table 6. Memory specifications**

Slots	One SODIMM slot
Type	DDR4
Speed	2400 MHz
Configurations supported	
Per memory module slot	4 GB and 8 GB
Total memory	4 GB and 8 GB

## Ports and connectors

**Table 7. Ports and connectors**

---

**External:**

---

USB	<ul style="list-style-type: none"><li>• One USB 2.0 port</li><li>• Two USB 3.1 Gen 1 ports</li></ul>
Audio/Video	<ul style="list-style-type: none"><li>• One HDMI v1.4b port</li><li>• One headset (headphone and microphone combo) port</li></ul>

**Table 8. Internal Ports and connectors**

---

**Internal:**

---

M.2 card	One M.2 slot for Wi-Fi/Bluetooth
----------	----------------------------------

При обращении используйте промокод AND-PDF и получите скидку.

## Communications

**Table 9. Communication specifications**

Wireless	<ul style="list-style-type: none"><li>• Wi-Fi 802.11ac</li><li>• Wi-Fi 802.11b/g/n</li><li>• Up to Bluetooth 4.1</li><li>• Wi-Fi Display Support (optional)</li></ul>
----------	---

## Wireless module

**Table 10. Wireless module specifications**

Transfer rate	<ul style="list-style-type: none"><li>• Up to 433 Mbps</li><li>• Up to 867 Mbps</li></ul>
Frequency bands supported	Dual band (optional) 2.4 GHz/5 GHz
Encryption	<ul style="list-style-type: none"><li>• 64-bit and 128-bit WEP</li><li>• TKIP</li><li>• AES-CCMP</li></ul>

## Audio

**Table 11. Audio specifications**

Controller	ALC 3204 with Waves MaxxAudio Pro
Speakers	Two
Speaker output	<ul style="list-style-type: none"><li>• Average: 2 W</li><li>• Peak: 2.5 W</li></ul>
Microphone	Single digital microphone in the camera assembly



При обращении используйте промокод AND-PDF и получите скидку.

## Storage

**Table 12. Storage specifications**

Interface	<ul style="list-style-type: none"><li>• SATA 6 Gbps for hard drive</li><li>• SATA 1.5 Gbps for optical drive</li></ul>
Hard drive	One 2.5-inch drive (SATA)
Optical-drive (optional)	One 9.5 mm DVD+/-RW drive
Capacity	
Hard drive	Up to 2 TB

## Media-card reader

**Table 13. Media-card reader specifications**

Type	One SD-card slot
Cards supported	<ul style="list-style-type: none"><li>• Secure Digital (SD)</li><li>• Secure Digital High Capacity (SDHC)</li><li>• SD Extended Capacity (SDXC)</li></ul>

## Keyboard

**Table 14. Keyboard specifications**

Type	Standard keyboard (without backlight)
Shortcut keys	Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key.

При обращении используйте промокод AND-PDF и получите скидку.



**NOTE: Press Fn+Esc to switch the primary behavior of the function keys (F1–F12) between two modes – multimedia key mode and function key mode.**



**NOTE: You can define the primary behavior of the function keys (F1–F12) by changing Function Key Behavior in BIOS setup program.**

[Keyboard shortcuts](#)

## Camera

**Table 15. Camera specifications**

Resolution	<ul style="list-style-type: none"><li>• Still image: 0.9 megapixel</li><li>• Video: 1280x720 (HD) at 30 fps</li></ul>
Diagonal viewing angle	74 degrees

## Touchpad

**Table 16. Touchpad**

Resolution	<ul style="list-style-type: none"><li>• Horizontal: 3200</li><li>• Vertical: 1943</li></ul>
Dimensions	<ul style="list-style-type: none"><li>• Width: 105 mm (4.13 in)</li><li>• Height: 65 mm (2.56 in)</li></ul>

## Touchpad gestures

For more information about touchpad gestures for Windows 10, see the Microsoft knowledge base article [4027871](#) at [support.microsoft.com](http://support.microsoft.com).

При обращении используйте промокод AND-PDF и получите скидку.

## Power adapter

**Table 17. Power adapter specifications**

	<b>45 W</b>
Input current (maximum)	1.30 A
Output current (continuous)	2.31 A
Input voltage	100 VAC–240 VAC
Input frequency	50 Hz–60 Hz
Rated output voltage	19.50 VDC
Temperature range	<ul style="list-style-type: none"><li>• Operating: 0°C to 40°C (32°F to 104°F)</li><li>• Storage: –40°C to 70°C (–40°F to 158°F)</li></ul>

## Battery

**Table 18. Battery specifications**

Type	4-cell “smart” lithium-ion (40 Whr)
Dimensions	<ul style="list-style-type: none"><li>• Width: 270 mm (10.63)</li><li>• Depth: 37.5 mm (1.47 in)</li><li>• Height: 20 mm (0.79 in)</li></ul>
Weight (maximum)	0.25 kg (0.55 lb)
Voltage	14.8 VDC
Operating time	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.
Life span (approximate)	300 discharge/charge cycles
Temperature range	<ul style="list-style-type: none"><li>• Operating: 0°C to 35°C (32°F to 95°F)</li></ul>

При обращении используйте промокод AND-PDF и получите скидку.

- Storage:  $-20^{\circ}\text{C}$  to  $60^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$  to  $140^{\circ}\text{F}$ )

Coin-cell battery

CR-2032

## Display

**Table 19. Display specifications**

Type	15.6-inch HD Ultraslim Anti-Glare non-touch screen
Resolution (maximum)	1366 x 768
Viewing angle (Left/Right/Up/Down)	40/40/10/30 degrees
Pixel pitch	0.252 mm
Dimension (excluding bezel):	
Height	360 mm (14.17 in)
Width	224 mm (8.82 in)
Diagonal	396.24 mm (15.6 in)

## Video

**Table 20. Video specifications**

Controller	<ul style="list-style-type: none"><li>• Intel UHD Graphics 600</li><li>• Intel UHD Graphics 605</li></ul>
Memory	Shared system memory

## Computer environment

**Airborne contaminant level:** G1 as defined by ISA-S71.04-1985

При обращении используйте промокод AND-PDF и получите скидку.

**Table 21. Computer environment**

	<b>Operating</b>	<b>Storage</b>
Temperature range	0°C to 35°C (32°F to 95°F)	-40°C to 65°C (-40°F to 149°F)
Relative humidity (maximum)	10% to 90% (non-condensing)	0% to 95% (non-condensing)
Vibration (maximum)*	0.66 GRMS	1.30 GRMS
Shock (maximum)	140 G <sup>†</sup>	160 G <sup>‡</sup>
Altitude (maximum)	0 m to 3048 m (0 ft to 10,000 ft)	0 m to 10,668 m (0 ft to 35,000 ft)

\* Measured using a random vibration spectrum that simulates user environment.

† Measured using a 2 ms half-sine pulse when the hard drive is in use.

‡ Measured using a 2 ms half-sine pulse when the hard-drive head is in parked position.

При обращении используйте промокод AND-PDF и получите скидку.

# Keyboard shortcuts














 
 






 **NOTE: Keyboard characters may differ depending on the keyboard language configuration. Keys used for shortcuts remain the same across all language configurations.**

Table 22. List of keyboard shortcuts

Keys	Description
	Mute audio
	Decrease volume
	Increase volume
	Play previous track/chapter
	Play/Pause
	Play next track/chapter
	Switch to external display
	Search
	Decrease brightness
	Increase brightness
 + 	Turn off/on wireless
 + 	Sleep

При обращении используйте промокод AND-PDF и получите скидку.

<b>Keys</b>	<b>Description</b>
	Toggle between power and battery-status light/hard-drive activity light
	Toggle Fn-key lock
	Page up
	Page down
	Home
	End

При обращении используйте промокод AND-PDF и получите скидку.

# Getting help and contacting Dell

## Self-help resources

You can get information and help on Dell products and services using these self-help resources:

### Table 23. Self-help resources

Information about Dell products and services

[www.dell.com](http://www.dell.com)

Dell Help & Support app



Tips



Contact Support

In Windows search, type Contact Support, and press Enter.

Online help for operating system

[www.dell.com/support/windows](http://www.dell.com/support/windows)

[www.dell.com/support/linux](http://www.dell.com/support/linux)

Troubleshooting information, user manuals, setup instructions, product specifications, technical help blogs, drivers, software updates, and so on.

[www.dell.com/support](http://www.dell.com/support)

Dell knowledge base articles for a variety of computer concerns.

- 1 Go to [www.dell.com/support](http://www.dell.com/support).
- 2 Type the subject or keyword in the **Search** box.
- 3 Click **Search** to retrieve the related articles.

Learn and know the following information about your product:

See *Me and My Dell* at [www.dell.com/support/manuals](http://www.dell.com/support/manuals).

- Product specifications
- Operating system



При обращении используйте промокод AND-PDF и получите скидку.

- Setting up and using your product
- Data backup
- Troubleshooting and diagnostics
- Factory and system restore
- BIOS information

To locate the *Me and My Dell* relevant to your product, identify your product through one of the following:

- Select **Detect Product**.
- Locate your product through the drop-down menu under **View Products**.
- Enter the **Service Tag number** or **Product ID** in the search bar.

## Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see [www.dell.com/contactdell](http://www.dell.com/contactdell).



**NOTE: Availability varies by country and product, and some services may not be available in your country.**



**NOTE: If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.**